 


wicler®  
the sound of biking



## INSTRUCTIONS

### USING WICLER ON THE BIKE

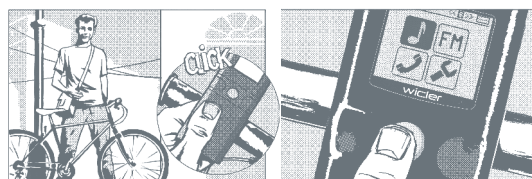

#### FIX THE BIKE'S FIXING TO THE HANDLEBARS

1. Open the strap pushing it downwards to increase diameter until it is completely open.
2. Make sure the fixing is in the correct position: the fixing's strap on the rear part of the handlebars and the central coupling device's projection facing you.
3. Fix the strap onto the desired place on the handlebars (it is recommended that this is on the right for right-handers and on the left for left-handers) and adjust it by pulling the strap upwards until it is perfectly fixed.
4. Close the strap by pushing it forwards to reduce its diameter until it is adjusted to the bike's handlebars.


Make sure that the strap has been adjusted properly applying pressure on its sides. It should not move if it has been adjusted properly thanks to its interior pads

#### FIX WICLER ON BIKE'S FIXING

1. Place the Wicler base on the central coupling device's projection.
2. Press Wicler on the fixing so that the 2 projections of the upper coupling devices of the fixing fit in the openings of the rear part of the Wicler device.

#### SWITCH ON WICLER

Press the right button for 3 sec.

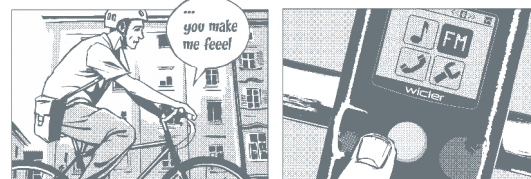

#### LISTENING TO MUSIC

Move to the icon and press to select this option: the music will start to play at the point where you left it last. Adjust the volume with . Go to the previous/next song by pressing . Go to the previous/next song folder by holding . Pressed down. For music pressing , continue listening to music by pressing again. To return to the main screen firstly press and then .

#### LISTENING TO THE RADIO

Move to the icon and press to select this option: the radio will begin playing on the radio station you listened to last. Adjust the volume with . Go to the previous/next preset radio station . Go to the previous/next radio station that can be listened to properly by keeping pressed down. To switch off the radio press .



#### USE HANDS-FREE

When you receive a call, the music and radio stop and the telephone rings on your Wicler. Answer the call by pressing . Adjust the volume with . If you want to reject the call, press . If you want to transfer the call to pick it up on the telephone, press . Press to finish the call or wait for the other person to hang up so you do not have to press any button. When you receive SMS/MMS on your mobile, the music and radio stop and a notification signal sounds if you have configured this on your mobile.

Remember that to use the hands-free function you must: Have previously paired Wicler with your Bluetooth mobile telephone (only once, see configurations: C) and have Bluetooth activated in Wicler and on your telephone

To activate/deactivate the Wicler Bluetooth rapidly, go to the icon on the -main menu- and press .



#### LIGHT

Press the right short-cut button to switch on the light. Press again so that the light flashes. Press a third time to switch off the light. Settings for right-handed people. This can be changed in -settings menu- (bike settings).

#### BELL

Press the short-cut button to make the bell ring. Settings for right-handed people. This can be changed in -settings menu- (bike settings).

#### SWITCH OFF WICLER

Press the right button for 3 sec.

#### REMOVE WICLER FROM THE BICYCLE'S FIXING

Press the 2 projections of the upper coupling devices inwards with one hand (as if you wanted to join them). Hold Wicler with the other hand and remove it from the fixing gently, raising it a little.

### WICLER AND ITS NAVIGATION

#### CENTRAL CONTROL BUTTON-JOYSTICK (5 POSITIONS)

- Press upwards / downwards
- Pressing in the centre
- Press to the left / right

#### SHORT-CUT BUTTONS

Pressing on the right-hand side  
Pressing on the left-hand side



#### DISPLAY SYMBOLS

- Charging battery
- Bluetooth® activated
- Bluetooth® activated and paired
- Playing of normal music
- Playing of random music


#### NAVIGATION

Move through the icons and lists in the menus with   
Press to select an icon or option  
To return to the previous menu, press   
The configured option appears marked with on the left.

**WICLER**  
135 mm high x 57 mm wide x 22 mm deep, 160 gr

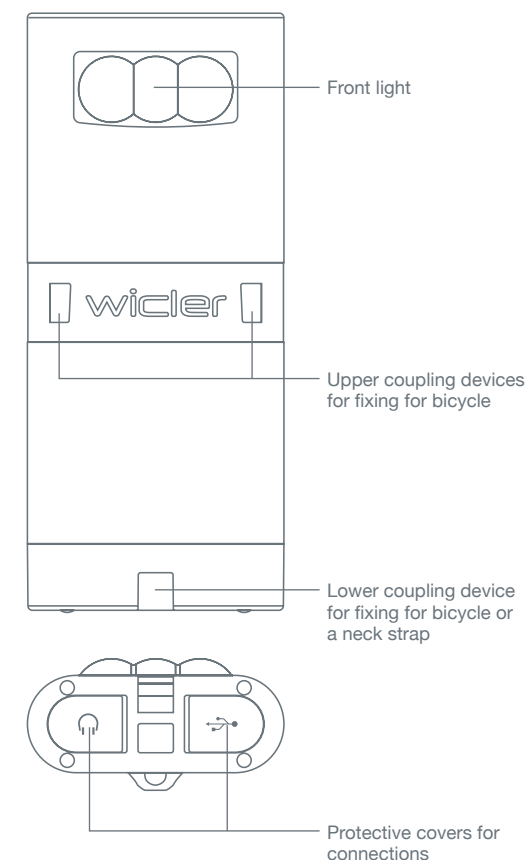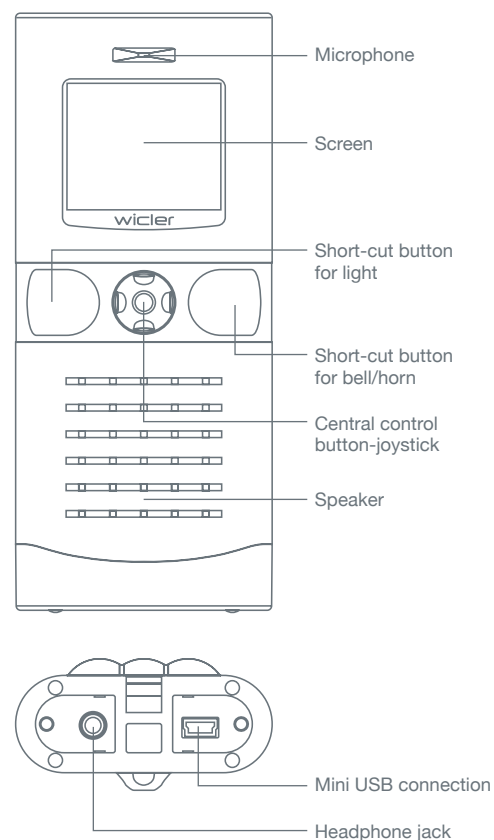

**FIXING FOR BICYCLE**  
82 mm high x 51 mm wide x 70 mm deep, 40 gr  
Fixing for handlebars of standard bicycle (Ø 18-28 mm)

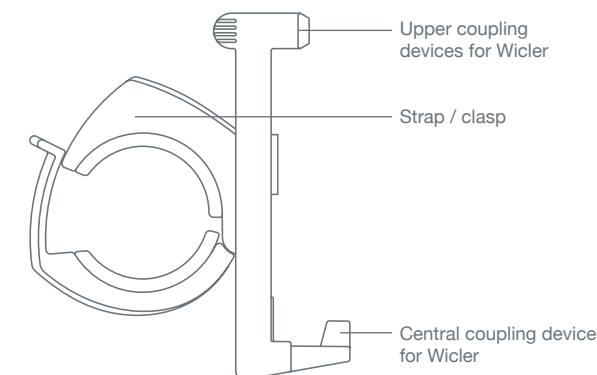

Register your Wicler to enjoy the 2 year Wicler Warranty. Do it on: +34 902 907 057 or over the Internet: [www.wicler.com](http://www.wicler.com) in the I already have a Wicler section. You will receive your Warranty certificate.



wicler®  
the sound of biking



wicler®  
the sound of biking

## THE FIRST TIME YOU USE WICLER






### SWITCH ON AND OFF

Press the right button for 3 sec. to switch on/off your Wicler.


### SELECT LANGUAGE

Find your language with  and press  to select it from the available options: German, Spanish, French, English, Italian and Dutch.




### CONFIGURING THE TIME

The time digits flash, configure the time with  and press  to confirm. Configure minutes with  and press  to confirm (they flash after selecting the time). Press  again to confirm. You will pass to the Wicler main menu.






### CHARGING THE BATTERY

Wicler incorporates a rechargeable and not removable Li-ion battery. To charge the battery, take the USB-mini USB cable included in the Wicler box and connect the cable's mini USB connection to the bottom part of Wicler lifting the rubber cover indicated with the symbol . Connect the other end of the cable to the USB port on your computer, marked with the same symbol (the computer must be switched on to charge devices). When the Wicler battery is being charged, you can only copy songs. You can also charge your Wicler directly in a plug socket with the adapter included.

**We recommend you charge the battery whenever you can, as this will improve its efficiency and life**


 Battery completely charged  
 Medium battery. It is recommended you charge the battery  
 Low battery. You need to charge the battery

### REVIEW OF TOOLS MENU

We recommend you review the settings menu before using Wicler to adapt it to your tastes. Entering the settings menu: -main menu-  (tools menu). Move through the icon options with   and press  to select. To return to the previous menu, press 

### MUSIC SETTINGS

#### PLAYING

NORMAL. Play songs in the order they have been recorded. Appears on screen 

RANDOM. Play songs in no pre-established order. Appears on screen 

#### SEE SONGS

Enables the display of folders and songs stored in Wicler (the folders will appear in block capitals on the Wicler display)

*See configurations A: Record music on Wicler*


### RADIO SETTINGS

#### PRESETTING

AUTOMATIC SEARCH. Wicler programmes radio stations with the best signal wherever you are and places them in dial order. Wicler memorises up to 15 radio stations automatically.

### AJUSTES MANOS LIBRES

#### BLUETOOTH®

To use the Wicler hands-free function, you need to have Bluetooth® activated in it and on the mobile telephone. If you are not going to use the hands-free function, it is better to deactivate Bluetooth® to avoid unnecessary battery consumption. When the Wicler Bluetooth® is activated, it appears on screen 

## CONFIGURATIONS

### A . TRANSFERRING MUSIC TO WICLER

Wicler has a 1GB memory where you can store songs in MP3 format to listen to them through the speaker or headphones. You do not need to install software for this since Wicler works like any external memory.

CONNECT YOUR WICLER TO YOUR COMPUTER  
Connect Wicler to the computer with the USB-mini USB cable. The battery charging symbol will appear on the display and you will see “Wicler” on your computer.

TRANSFER THE SONGS TO WICLER FROM YOUR COMPUTER

Transfer your songs in MP3 format to Wicler, dragging them or copying and pasting the files.. You can also include the folders in Wicler so that the songs are grouped by artist or album.

**You need to have the songs previously copied in the computer to transfer them later to Wicler. Make sure that when you copy them, you do so in MP3 format**

DISCONNECT WICLER FROM THE COMPUTER

Disconnect the cable if you do not want to charge the battery and listen to your music

MAKE SURE THE SONGS HAVE BEEN

TRANSFERRED CORRECTLY TO WICLER

Check it in: -settings menu-  (music settings)- SEE SONGS-.

### B. CONFIGURING BLUETOOTH®

To use the Wicler hands-free function, you need to have previously configured Bluetooth®, as this technology enables the wireless communication of two devices with each other. You only need to do this once.

ACTIVATE BLUETOOTH® IN WICLER

Select  in the -main menu- to go to the -settings menu-.

Select  in the -settings menu- to go to Bluetooth® settings.

Select -BLUETOOTH® ■ Activate- in Wicler (follow this order when activating Bluetooth®). You will see  on the display.

ACTIVATE BLUETOOTH® ON YOUR MOBILE PHONE

Activate Bluetooth® on your mobile phone, if you have not already activated it. See the mobile phone's instructions for use if you do not know how to do this..

MAKE BOTH DEVICES VISIBLE (PAIR DEVICES))

In Wicler select the option -BLUETOOTH®- ■ Pairing devices-


On your telephone select an option similar to -find devices-

When your telephone finds Wicler, select it. The telephone will ask you for the code/PIN for pairing both devices. Enter the Wicler code in your telephone: 1234. A confirmation message similar to “Wicler paired” will appear on your telephone. The message “Wicler connected to ...” will appear

**It is advisable to activate a similar option to “Automatic Reconnection” or similar on your mobile phone so that both devices reconnect every time they locate each other**

MAKE SURE THE DEVICES ARE CONNECTED

AND PAIRED

Make sure that the symbol  appears on the Wicler screen indicating that Wicler Bluetooth is activated and paired with another device.

If you have not managed to pair both devices, proceed as follows:

1. Eliminate the Wicler device from your mobile phone that appears as the Bluetooth hands-free device.
2. Deactivate Bluetooth in your mobile phone and in Wicler.
3. Repeat the previous steps from point 1.

HANDS FREE MODE “ONLY ON BIKE” OR “ALWAYS”

Wicler allows you to set up the use of the hands free function in two modes: “Only on bike” or “Always”. The option “Only on bike” allows the connection Wicler-mobile only when the device is in its fixing; otherwise the hands free system will be automatically disconnected and vice versa. The option “Always” allows the connection Wicler-mobile in any case, even when the device is not if its fixing. The initial default option in the Wicler units is “Always”.

### C. UPDATING WICLER

Update your Wicler from [www.wicler.com](http://www.wicler.com). I already have Wicler, Updating Wicler and follow the instructions that appear there. If you have registered your Wicler, we will inform you when there is a new version available.

## USEFULL INFORMATION

### TECHNICAL INFORMATION

1100mAh Li-ion rechargeable battery, 3.7v with safety circuit.  
Recharging with USB 2.0 at 450mA/hour connecting the device to a computer with a USB 2.0 port or connecting to a 220V power socket using the USB adapter included.

### RECOMMENDATIONS

Look after your Wicler and always keep it in a clean, dust-free environment.

Do not try to take your product apart or alter it. Do not immerse your Wicler in water and protect it in case of heavy rain.

Do not expose your Wicler to temperatures of over +60°C; it may explode if placed close to fire. Charge your Wicler's battery in temperatures between +5°C and +45°C.

Keep your Wicler out of children's reach and prevent them from playing with it.

**Using headphones while riding a bicycle is either prohibited or advised against by traffic authorities in most countries. Remember that when you ride a bike you are driving a vehicle, which is why it is important to respect the Highway Code and concentrate fully on riding the bike.**



This symbol indicates that Wicler complies with the technical specifications for offering and guaranteeing a high level of health and safety protection in its use and operation, according to the provisions in European Community directives and the state regulations of member countries. These technical specifications which have been passed by Wicler refer to: Bluetooth® radio-frequency (RF), electromagnetic compatibility (EMC) and electrical safety (ES).

### RECYCLING



This symbol indicates that Wicler is an electronic device and must therefore never be thrown away with other domestic waste. If you want to get rid of it, take it to the shop where you are going to buy a new Wicler or the nearest recycling point or municipal waste treatment facility. Good for you, good for the planet, S.L. complies with the obligations established in RD 208/2005 of the 25 February 2005 on electrical and electronic appliances and the disposal of their waste through the SIG managed by Ecoasimelec.



This symbol guarantees that the company Good for you, good for the planet, S.L. complies with the obligations established in Law 11/1997 of the 24 April 1997 on containers and container waste through the SIG managed by Ecoembes. These obligations refer to the recovery of the container waste of products supplied to the market for recycling.

### 2 YEAR WICLER WARRANTY

#### COMMERCIAL WARRANTY

Good for you, good for the planet, S.L. guarantees the product purchased against possible material and labour defects for a two-year period from the original purchase date.

To enjoy the Wicler Warranty you must:

1. Keep hold of the product's purchase receipt (receipt or invoice).
2. Register your Wicler. Do it on: +34 902 907 057 or over the Internet: [www.wicler.com](http://www.wicler.com) in the I already have a Wicler section. You will need to have your Wicler and the purchase receipt to hand.
3. You will receive the Wicler 2 year Warranty Certificate. Keep it safe with the original purchase receipt.

#### LEGAL WARRANTY

If you have purchased this Wicler in Spain or through [www.wicler.com](http://www.wicler.com), in addition to the Wicler Warranty you will have a legal guarantee under the provisions in Law 23/2003 on Guarantees in the Sale of Consumer Goods of the 10 July 2003..

### CUSTOMER SERVICE

If your Wicler does not work correctly, contact Customer Service on: +34 902 907 057 or through [www.wicler.com](http://www.wicler.com) in the I already have a Wicler section.

Any product or company names identified with symbol ® are trade marks of their respective owners. Wicler is a registered trademark belonging to Good for you, good for the planet, S.L. The Wicler device and SWS safety system are patented (patent pending).

The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by Good for you, good for the planet, S.L. is under license. Other trademarks and trade names are those of their respective owners. Good for you, good for the planet, S.L. is a member of Bluetooth® SIG.

© 2008. This document belongs to Good for you, good for the planet, S.L. Its partial or total reproduction is prohibited. Good for you, good for the planet, S.L. Capitán Haya 1, 28020 Madrid-Spain.

[www.wicler.com](http://www.wicler.com)

Ref. 10INS0200.GV