

The next generation of charger
...because life doesn't stop



- The lightest, most versatile charger
- Emergency power in your pocket
- 10 times more powerful than a conventional battery
- Up to 1 year standby charge


Worldwide power solutions for technology that travels

Powermonkey is *the* essential travel companion providing portable power for your gadgets when you need it most.

Imagine you're on an important business trip and you've left your mobile phone charger at home, or trekking through Thailand about to take that life-defining picture and your camera dies... avoid nightmare scenarios like this with Powermonkey's reserve power supply!

Small, agile and powerful, the revolutionary Powermonkey can be left in your bag, car or desk and will be ready to provide you with emergency power when you need it most.

To keep the Powermonkey at full strength just top up the supply with one of the included mains chargers and make sure you have power wherever you are in the world.

- Compatible with the majority of standard mobile phones including Nokia & Mini Nokia, Motorola, Samsung, Siemens & Sony Ericsson
- USB connector powers up iPods and accessories, MP3 players, PDAs, smart mobile phones, digital cameras, Bluetooth headsets and many more digital devices 
- Small, lightweight design that fits in your pocket
- Re-usable reserve power pack - no batteries required
- Includes mains travel charger for use in 150 countries 110V to 240V

Maximum reserve power available:

All iPods – 40 hours
(iPod USB charging cable required)
Mobile phones – 96 hours
Digital cameras – 1600 pictures
Two-way radios – 24 hours
PSPs – 5 hours
MP3/MP4s – 6 hours
PDAs – 48 hours



Specifications:

Capacity	2200mAh
Input Interface	DC 3.5 x 1.3
Input Voltage	5V 500mA
Output Interface	D3.5 x 1.1
Output Voltage	4.5-5.5V
Output Max Current	1.2A
Colour	Silver
Weight	70G
Dimension	88x39x37mm

Instructions

To charge device:

1. Switch Powermonkey on
2. Green LED will flash (if red light displays, Powermonkey needs to be recharged)
3. Connect to device requiring charging
4. When device is fully charged, remove Powermonkey
5. Switch Powermonkey off when not in use to conserve power

To recharge Powermonkey

1. Ensure unit is switched off
2. Connect to mains charger
3. LED will turn red
4. When fully charged, LED will turn green
5. Remove from mains charger

Each kit contains:

- ➔ 1 x Powermonkey charging unit
- ➔ 1 x universal mains charger which will work in over 150 countries and has interchangeable heads for UK, US, Australia and Europe
- ➔ Nokia & Mini Nokia, Motorola V66, Samsung A288, Siemens C25 and Sony Ericsson wide connector
- ➔ 1 x mini USB for Motorola Razr V series, BlackBerry and Bluetooth head sets
- ➔ 1 x USB for iPod, smart phones, PDA and other devices
- ➔ 1 x connector for Sony PSP and most digital cameras
- ➔ 1 x black travel pouch

Powertraveller

8 Delta Park, Wilsom Road
Alton, Hampshire,
GU34 2RQ, UK
Tel: +44 (0)1420 542980
info@powertraveller.com

